











# SCM-10 Installation Diagram

LIT-LED-UWL-4610-INST

REV A

ECO 28610

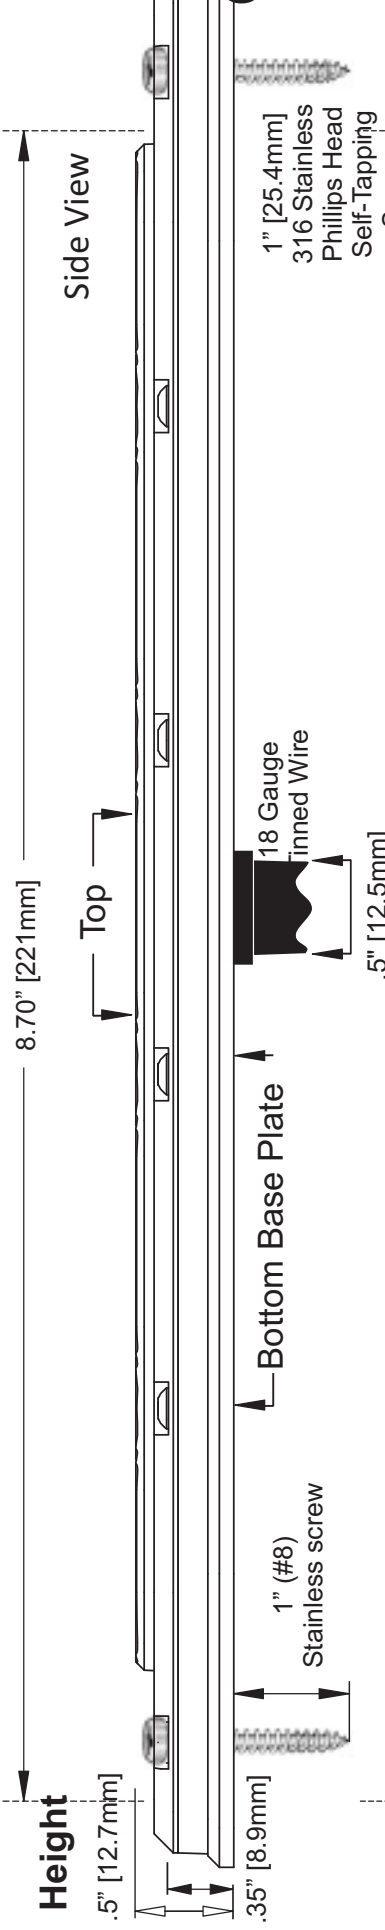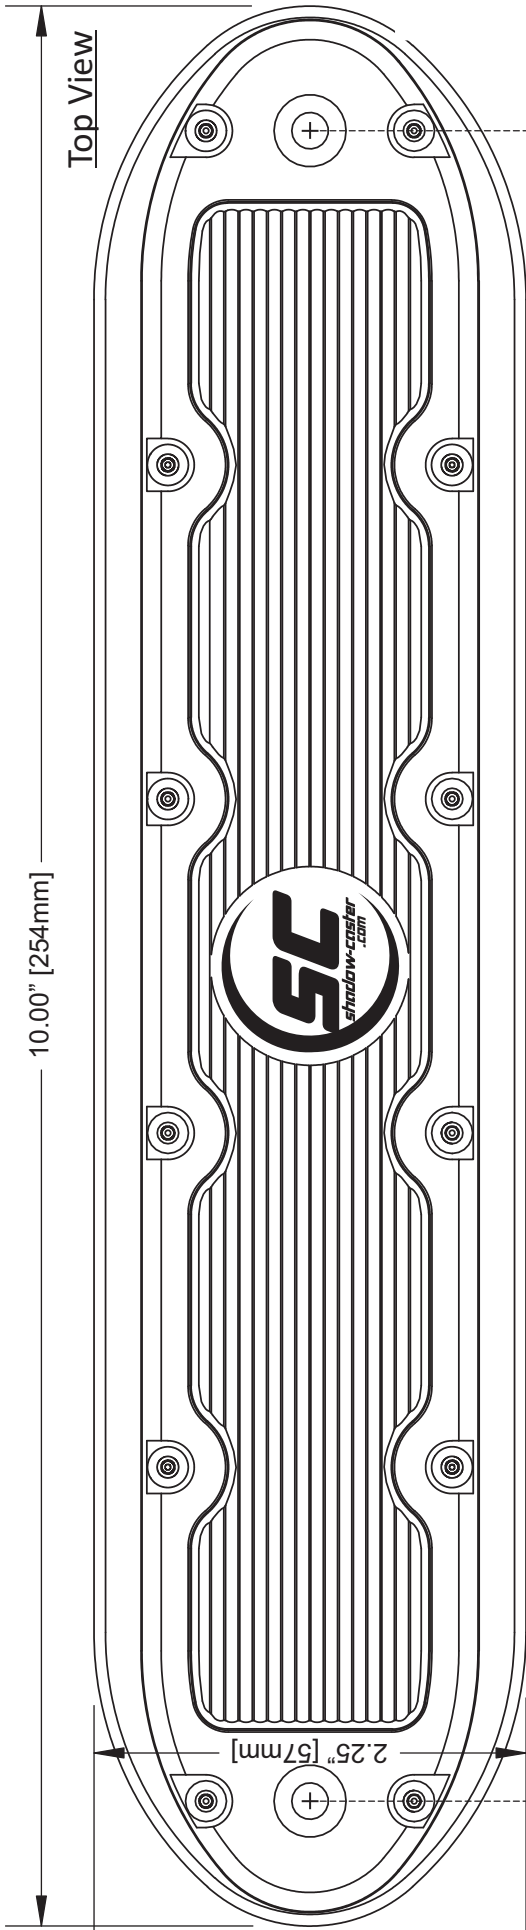

**PLEASE READ INSTRUCTIONS INSIDE TEMPLATE**

FOR CENTER WIRE HOLE USE THE FOLLOWING:


DO NOT USE TEMPLATE TO MARK SCREW HOLES

1<sup>st</sup> - DRILL PILOT HOLE AT CENTER FOR THE WIRE, THEN USE 5/8" DRILL ALL THE WAY THROUGH

DO NOT USE TEMPLATE TO MARK SCREW HOLES

WHEN PRE-DRILLING SCREWS:  
FIRST PRE-DRILL CENTER HOLE AND RUN WIRE. THEN MARK YOUR SCREW HOLES WITH DRILL BIT OR PENCIL WHILE USING ACTUAL LIGHT HOUSING

**SCM-10™**  
**Typical Power Requirements**  
**3.5 Amps@12v**

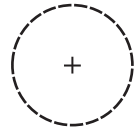

WHEN PRE-DRILLING SCREWS:  
FIRST PRE-DRILL CENTER HOLE AND RUN WIRE. THEN MARK YOUR SCREW HOLES WITH DRILL BIT OR PENCIL WHILE USING ACTUAL LIGHT HOUSING

Scale 1:1 (If in doubt ask)

2<sup>nd</sup> - RUN WIRE THROUGH THE HOLE AND MARK ONE MOUNTING HOLE LOCATION  
3<sup>rd</sup> - FOLLOW STEPS ON FRONT OF SHEET FOR DRILLING MOUNTING HOLES

TAPE HERE

TAPE HERE

TAPE HERE

TAPE HERE