











# SCM-10 Installation Diagram

LIT-LED-UWL-4610-INST

REV A


ECO 28610

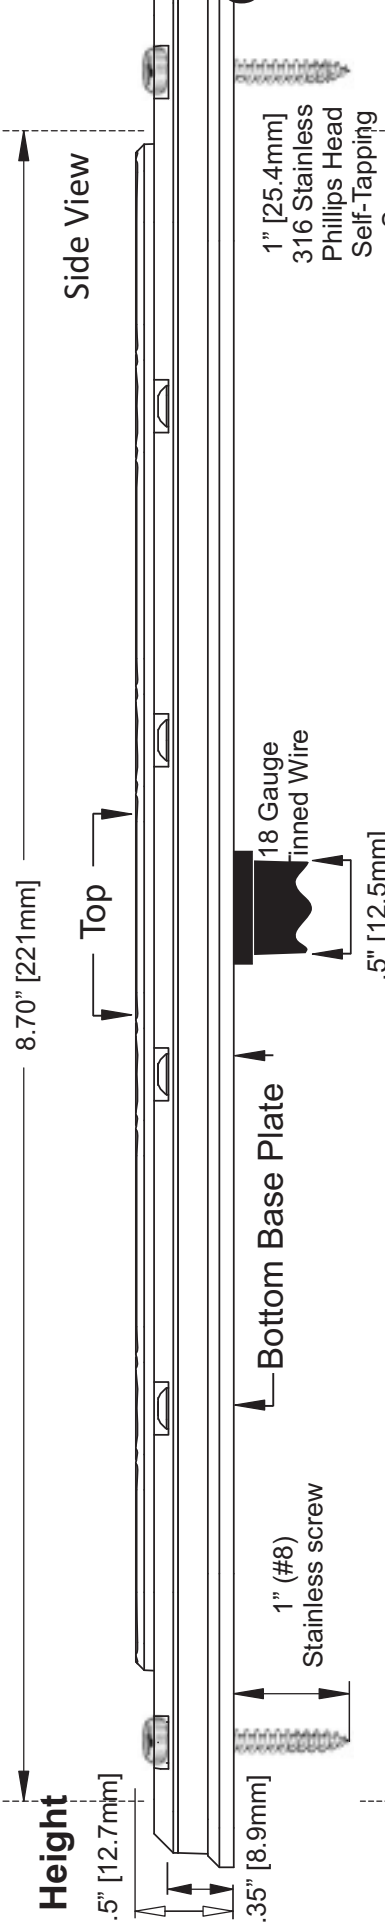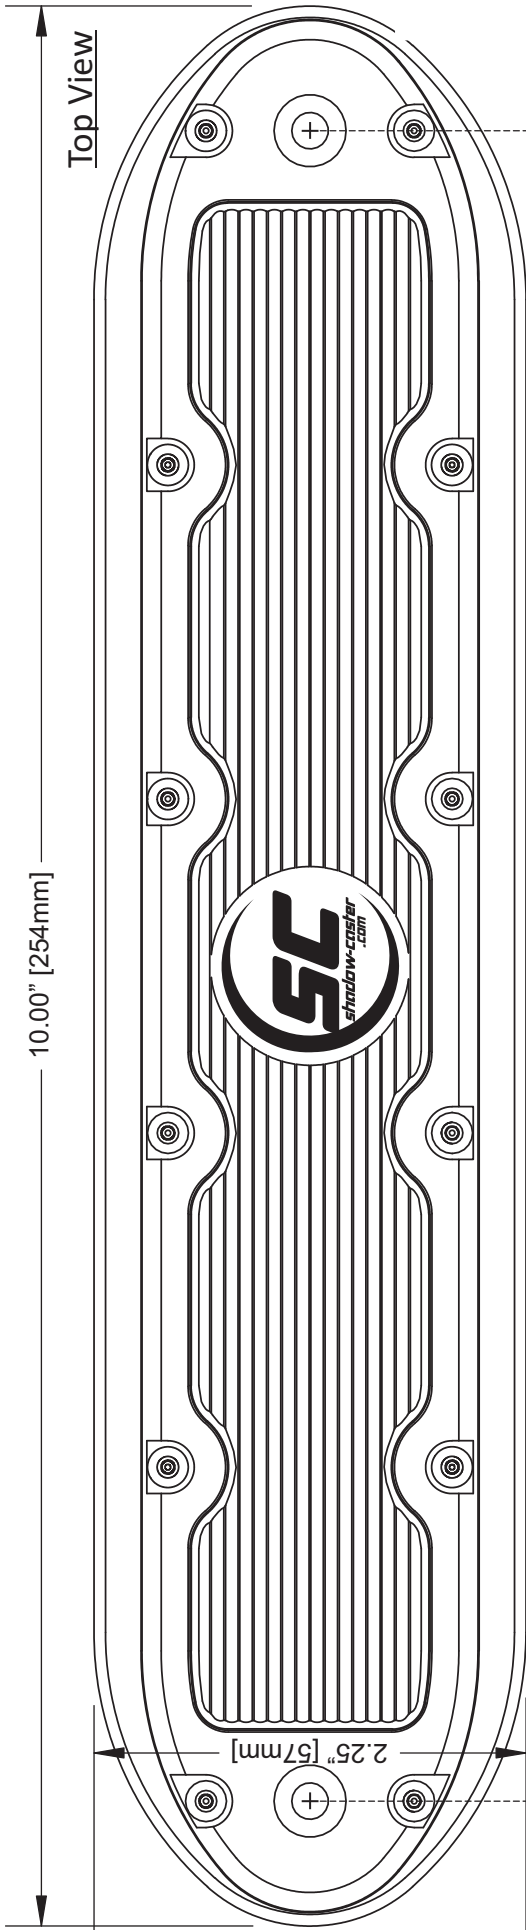

**PLEASE READ INSTRUCTIONS INSIDE TEMPLATE**

**FOR CENTER WIRE HOLE USE THE FOLLOWING:**

- 1<sup>st</sup> - DRILL PILOT HOLE AT CENTER FOR THE WIRE, THEN USE 5/8" DRILL ALL THE WAY THROUGH
- 2<sup>nd</sup> - RUN WIRE THROUGH THE HOLE AND MARK ONE MOUNTING HOLE LOCATION
- 3<sup>rd</sup> - FOLLOW STEPS ON FRONT OF SHEET FOR DRILLING MOUNTING HOLES

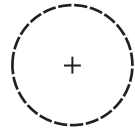

**SCM-10™**  
**Typical Power Requirements**  
**3.5 Amps@12v**

DO NOT USE TEMPLATE TO MARK SCREW HOLES

**WHEN PRE-DRILLING SCREWS:**  
 FIRST PRE-DRILL CENTER HOLE AND RUN WIRE. THEN MARK YOUR SCREW HOLES WITH DRILL BIT OR PENCIL WHILE USING ACTUAL LIGHT HOUSING

Scale 1:1 (If in doubt ask)

TAPE HERE

TAPE HERE

TAPE HERE

TAPE HERE