


DIODE KIT Model # DK Installation Instructions

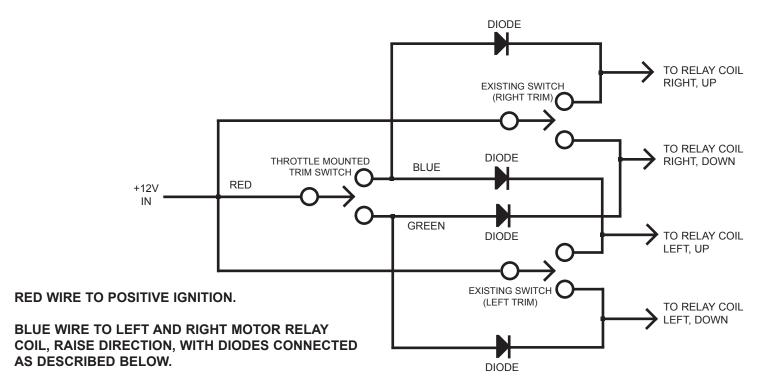

GREEN WIRE TO LEFT AND RIGHT MOTOR RELAY COIL, LOWER DIRECTION, WITH DIODES CONNECTED AS DESCRIBED BELOW.

SOLDER DIODES IN LINE WITH WIRES, WHITE STRIPE ON DIODE SHOULD FACE AWAY FROM THROTTLE MOUNTED TRIM SWITCH